


Close Series

Pavifence Fence

OUTDOOR SYNTHETIC
TECHNOLOGICAL FENCE

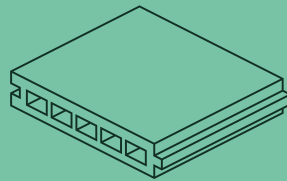


TECHNICAL SPECIFICATIONS

 Pavimentus



Product Description



Outdoor synthetic technological fence

The PAVIFENCE Synthetic Technological Fence from the CLOSE series is an ideal choice for those looking to delimit and protect outdoor spaces with a modern and functional touch. Made from high-quality recycled and recyclable materials, this fence has been designed to offer great resistance to the elements and easy installation and maintenance. The CLOSE series is characterized by a design without separation between slats, providing greater privacy and a uniform and elegant appearance, perfect for gardens, terraces, neighborhood communities, sports centers and other spaces where privacy is essential.


Unlike the encapsulated version, the standard PAVIFENCE Fence does not have a full plastic coating. This means that, although it remains highly weather resistant, its protection against stains and scratches is less than that of the encapsulated Pavifence Pro. However, the standard PAVIFENCE still maintains excellent structural resistance to sun exposure, humidity and temperature changes, without requiring special treatments for its conservation.

The maintenance of this fence is simple, as it only requires water to keep it clean and in good condition. Its robust and resistant design makes it a long-lasting and reliable option, capable of maintaining its appearance for years without deteriorating. In addition, as it does not contain wood-derived components, it is immune to pests such as insects and termites.

The PAVIFENCE from the CLOSE series, with its solid structure and no spaces between slats, offers an effective solution for those who wish to enjoy a more closed and protected environment, without giving up the modern and sustainable aesthetics that characterise Pavimentus products. The possibility of choosing between various finishes and colours allows for perfect integration into any outdoor project, guaranteeing a balance between functionality and design.



Technical details



161,5 cm x 20 cm x 1745 cm

3,8 close series parts

Composition :

30% recycled HDPE, 60% wood dust and 10% additive material: lubricants, natural fungicidal pigments, UV protectors.

Properties	Results	Test method
Density	1.33 g/cm ³	ASTM D792-13
Flexural strength	13.66 MPa	ASTMD790-10
Formaldehyde content	<0.02 ppm	ASTM D6007
Recovering fluency	56%	ASTM D2240-05
Tensile strength	8 MPa	ASTM D638-14
Water absorption	1,01%	ASTM D570-98
Slip resistance	0,45	ASTM D696-08
Thermal resistance	de -30° a 50°	-



Range of finishes

**CENIZA**

161,5 mm x 20 mm x 1745 mm

Reference: Ceniza Estándar


**ROBLE**

161,5 mm x 20 mm x 1745 mm


Reference: Roble Estándar




Accessories

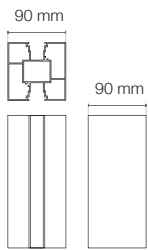


ALUMINUM FENCE PILLAR
90 mm x 90 mm

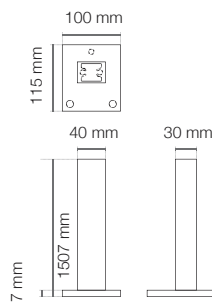


PILLAR SUPPORT
140 mm x 100 mm

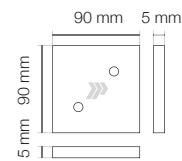

TFENCE PILLAR COVER
90 mm x 90 mm

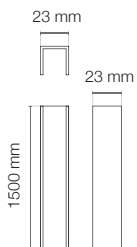

ALUMINUM PROFILE
23 mm x 23 mm x 1500 mm

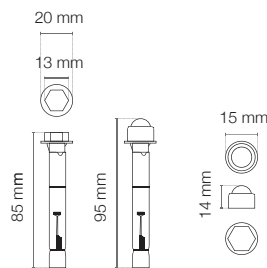

EXPANSIVE SCREW
M8 x 100
4 ud/pillar



FLAT SCREW M3,9 x 19
14 ud/pillar



Assembly instructions

Before beginning the installation, it is essential to read the entire installation manual carefully to comply with the basic assembly rules. Failure to comply will result in the cancellation of the Limited Warranty.

While our materials are very durable, we recommend that you follow storage and handling guidelines.

Always store the boards resting on a smooth, flat surface and out of direct sunlight exposure. It is advisable to place the material at the installation site 24 hours before the start of the installation, so that the material will adapt to the environmental conditions of the site.

Fence boards should be lifted and placed carefully to avoid damage, do not slide the boards over each other. Fence boards should be carried by the middle and on their edge for better support when moving them. Avoid sliding or dragging any equipment over the surface of the board to avoid dulling the surface. The exterior of the fence boards should be kept free of debris and construction materials to avoid damaging them.

Personal protective equipment (PPE) must be worn at all times when installing a synthetic technology fence. We recommend wearing gloves, protective glasses and a dust mask.

There are two main methods of installing technology fences: On soil or grass / On a concrete base or brick wall



Installation on ground or grass

STEP 1

Use a string to mark the fence line. Make sure the area is free of obstacles or vegetation.

STEP 2

Dig a hole to a depth of 600 to 850 mm, depending on the softness of the soil. Make sure the base of the hole is level.

STEP 3

Place the pillar support into the hole and make sure it is straight, using a level.

STEP 4

Fill the hole with mixed concrete. We recommend 2.5 to 3 20kg bags, depending on the size of the hole and soil conditions. Make sure the concrete is filled to approximately 25mm below ground level. Make sure the concrete is angled away from the fence post to facilitate water runoff.

STEP 5

Place the composite fence post on support. Check the post again to make sure it is plumb and level.

The composite fence post should be placed on the concrete. Only the support is secured to the ground. While the concrete sets, make sure the post does not rest on the surface. Use temporary battens if necessary.

STEP 6

Use a string to mark the next post and measure the distance to make sure it is correct. It may be helpful to use the profile

bottom to double check the distance and mark it. Be careful not to leave any wet concrete on the rail. aluminum rail to double check the distance and mark it. Be careful not to leave any wet concrete on the rail.

At this point, you can either:

Complete the first fence panel by moving on to step 7 or continue marking the remaining fence posts as per step 5.

STEP 7

Before installing the bottom profile, you may want to install the safety clips at the bottom of the fence post to support the boards. This is particularly useful when the ground is not solid enough.

STEP 8

Place the aluminium bottom rail into the H-slot of the pillar and align both ends. Slide the profile down between the pillars.

Level the aluminium bottom profile. The profile can be sunk into the ground if necessary.

STEP 9

Place the boards between the pillars, leaving a 2.5 mm gap between the end of the board and the pillar. Stack the remaining boards.

STEP 10

Finish by inserting the top profile of the fence.

STEP 11

Optional: It is possible to secure the boards in place using a safety clip.

STEP 12

Insert the post cap.



Installation on concrete base or brick wall

STEP 1

Place the post supports into position, ensuring they are plumb/flat and square to the length of the fence. First, drill 3-5mm pilot holes.

STEP 2

Make sure the hole is straight and secure.

STEP 3

Make sure the expansion screws are tightened enough.

STEP 4

Slide the pillar onto the bracket.

STEP 5

Insert the lower aluminium profile and the fence boards.

Optional: it is possible to secure the boards in place using a safety clip.

STEP 6

Check once again that the expansion screws are properly tightened. Place the plastic caps over the screws.

STEP 7

Insert the upper aluminium profile.

STEP 8




Insert the post caps.

Assembly sketch

Before you begin, make sure that the wall or foundation is in good condition. The minimum depth of the concrete should be 150 mm thick.

Remember, it is very important that the surface is properly prepared and that the supports are level, to ensure the correct installation of the fence.

The pillars usually come already machined with the support and cover mounted.

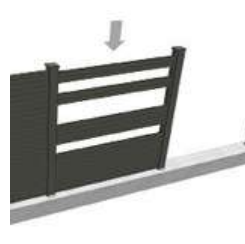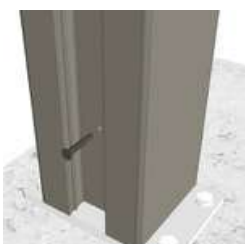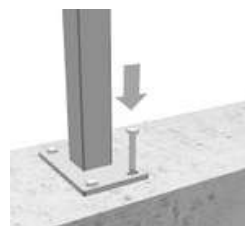

TECHNICAL SPECIFICATIONS



Web

Mail

Telèfon

www.pavimentus.com

comercial@pavimentus.com

(+34) 931 351 005
